

POS-Media-Display UV-215-HD-PS

Built-in HD Media Player



POS-Media-Display UV-215-HD-PS features 21,5" LCD display with built-in HD media player and stereo speakers. Media files are stored and played back from a plug-and-play CF/SD card, and updated automatically through a USB key. With a front tempered glass protection, POS-Media-Display UV-215-HD-PS provides an ideal solution for indoor shelf-edge/wall-hanging advertising.

Cabinet	
Case Material	Powder-coated metal case
Case Color	Standard color: black/silver Customized color upon request
Front protection	Tempered glass
Fixations	Vesa 100 x 50mm

LCD panel Specifications	
Screen Size	21.5"
Active Area	476.64(H) × 268.11(V)
Resolution	1920 x 1080
Pixel pitch	0.248(H) × 0.248(V)
Brightness	250cd/m ²
Contrast Ratio	(1000:1)
Aspect Ratio	(16:9)
Viewing Angle	85/85/80/80(L/R/U/D)

Content storage & update	
Content Storage	CF&SD card
Content update	USB key (auto content update by USB key)

Power	
Power input	AC100-240V
Power Consumption	60W

Audio output	
Built-in stereo speakers	5W *2


Supported media formats	
Video	MPG, MPEG, AVI, MP4, RMVB, RM (1920*1080 resolution)
Image	JPG, BMP

Media play function	
Plug-and-play	Plug-and-Play / No windows OS
Auto playback and loop function	Auto-loop playback media files once power on
Playback mode	Repeat one, repeat all, scheduled playlist repeat
Quick button control	increase/decrease volume, adjust colors/brightness/contrast ratio, set up the playback mode "repeat one/all", select media file for instant playback
Daily timer	By remote control
Motion sensor(Optional)	Optional motion sensor function to control the audio/video output, and the audio/video output is only activated when a human body is detected
Scrolling text	Scrolling text function
OSD language	English

General information	
Dimension	560×323×60mm
Weight	5.725kgs
Storage Temp	(-20 -- 60 degree)
Working Temp	(-0-- 50 degree)
Certificates	CE&Rohs
Accessories	Remote control, power adaptor, user manual

POS-Media-Display UV-215-HD-PS

Built-in HD Media Player

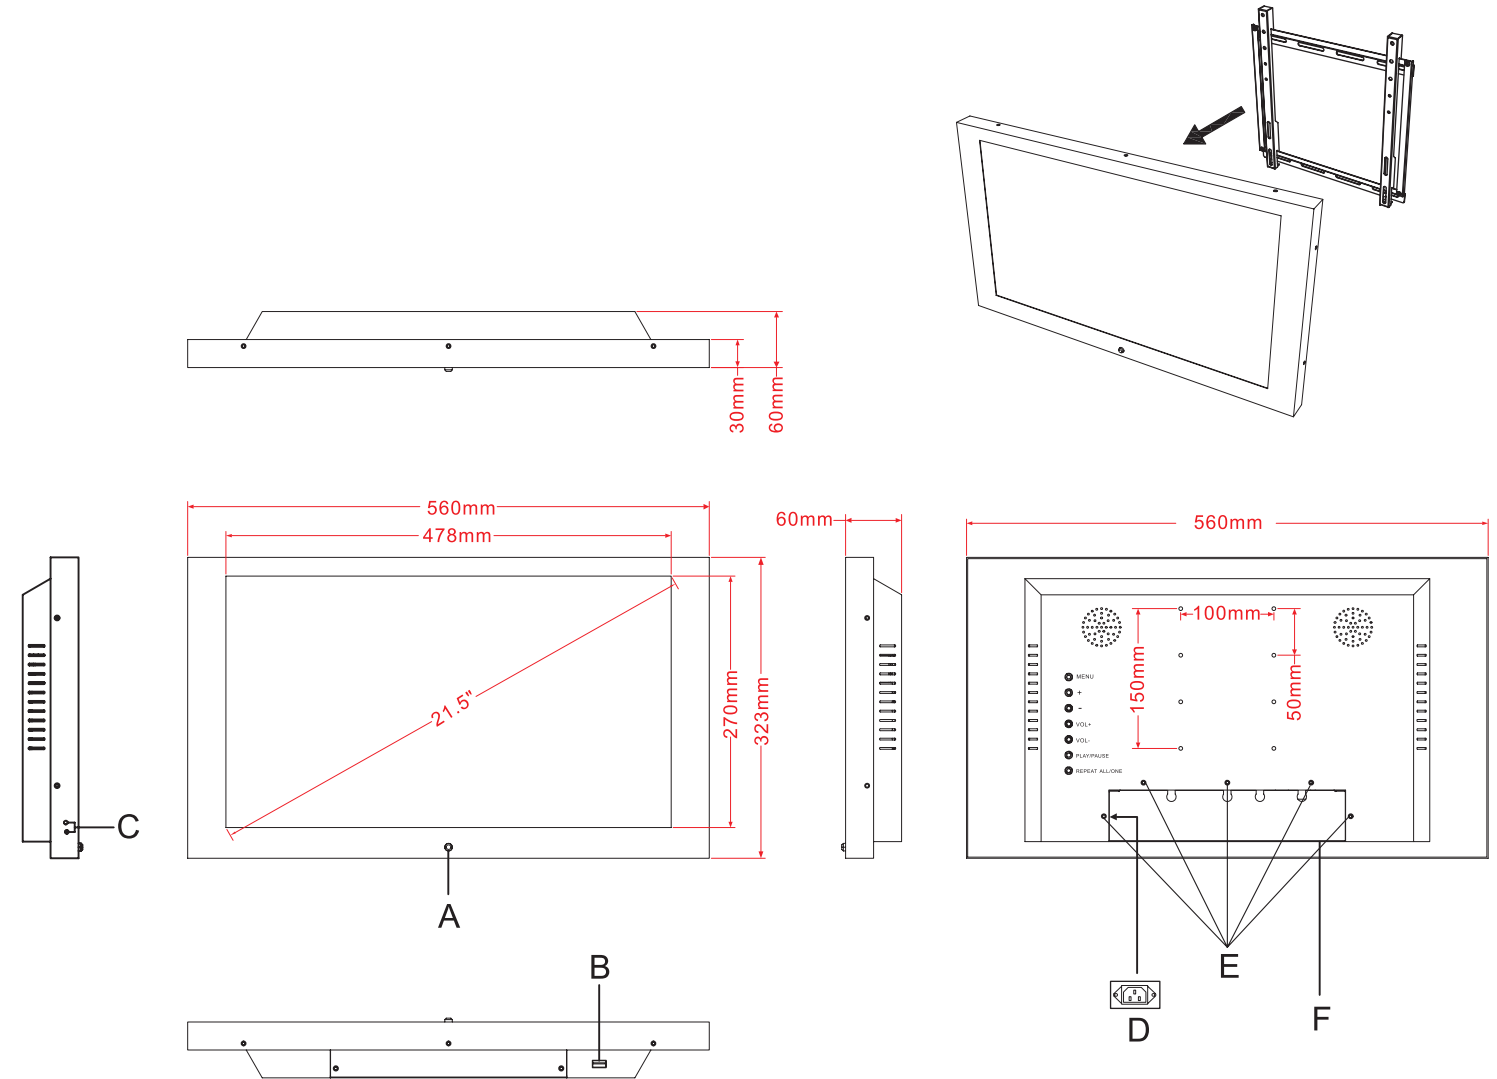

A: Motion Sensor (optional)
B: Direct USB access
C: Remote control sensor

D: AC Power plug (100-240V)
E: Screw for fixing the metal pad
F: CF and SD Card slot